


6U=368 mm
9U=501 mm
12U=635 mm
15U=769 mm
18U=901 mm


WWW.SYSRACKS.COM
Technical support:
info@sysracks.com
(514)660-6333




Join the frames with the Top/Bottom Covers into a single construction
Plastic bag #1 (17 psc).

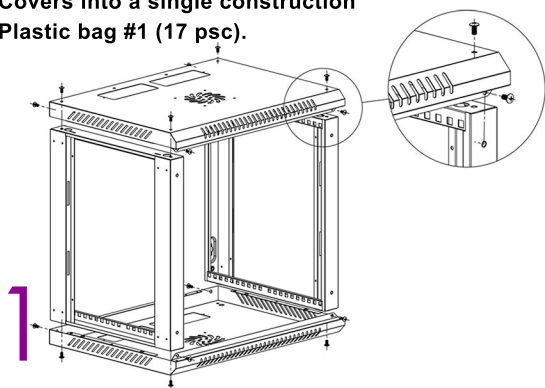


Install the side panel locking mechanism.

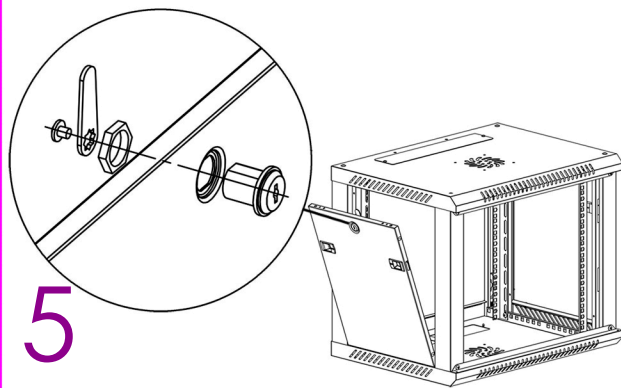


Install the rear panel using 4 X M5 self-tapping screws.
Plastic bag #5 (8 psc).

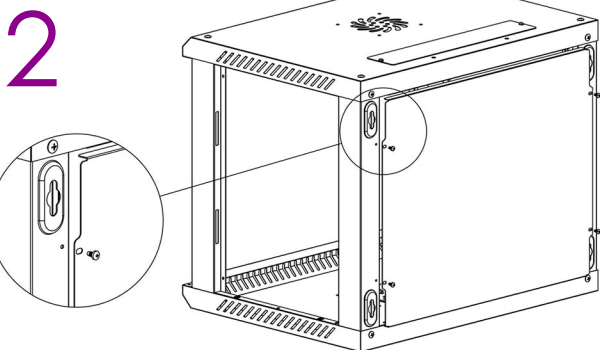


Install the levelling feet
(or, casters depending on configuration)

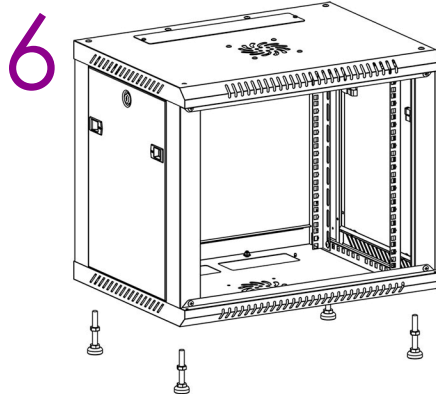

Install the brush type cable entries using M6 bolts/nuts.
2 bolts/nuts for each cable entry.
Plastic bag #3 (4 SET).

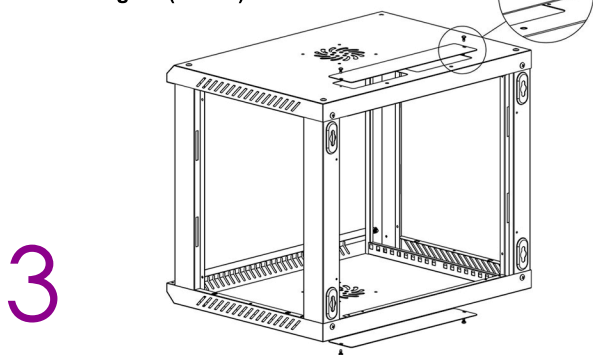

Install the front door locking mechanism.

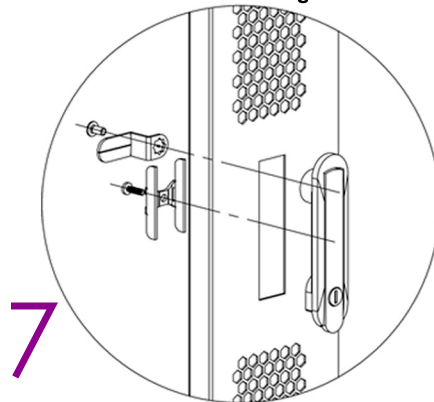

Using the plastic bag #2 (17 SET),
install the vertical mounting rails.
The distance between the rails is
to be determined based on the
depth of the equipment or,
the supplied shelves.

Use the M6 bolts/nuts to install
the shelves on the desired height

4 [youtube video assembly guide](#)
"SYSRACKS WALL MOUNT"

Use the plastic bushings (or, adjustable washers
if needed) when mounting the front door.

