


# Assembly Instructions PR - Premium Series Server Cabinet Sysracks


## 1. Main construction.

Using screws # 1 (M-6, 67 pcs), combine vertical frames, top and bottom into a single carcass. **Important: Make sure the rectangular cuts in the vertical post face towards the side panels**

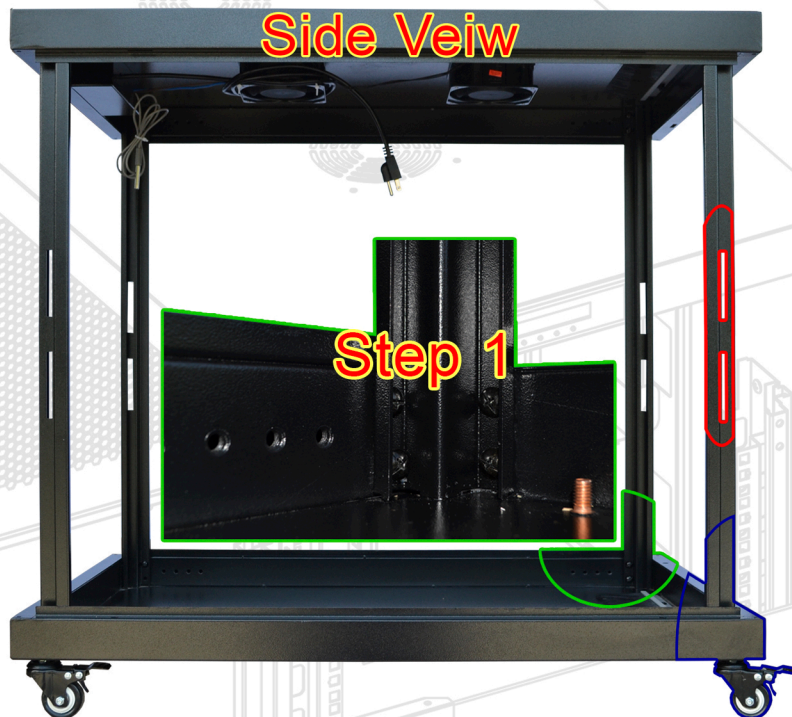

## 2. Vertical mounting rails.

Using screws # 1 (M-6, 67 pcs), install the vertical mounting rails (U-marking). The distance between the rails is to be determined based on mounting equipment.

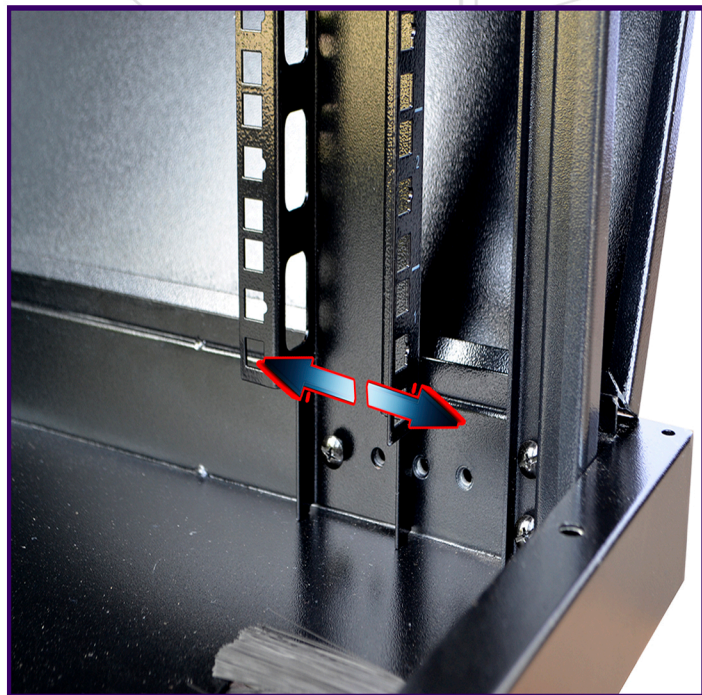

## 3. Install the casters.

## 4. Side Panels.

Holding the plastic handle in the side panel, insert the lock into the side panel slot. Screw the fixing nut from the inside and install the metal latch into open/close position. Do same with the other side panel.

## 5. Rear Panel.

Insert the rear door lock into the slot and secure with the nut from the other side. Install the metal latch into open/close position.

## 6. Front Door.

Insert the metal pin #8 into the round hole on the bottom. Install the door onto the pin and pull down the top metal spring hinge. Release once the door fixed.

Install the front door lock and "Z" shape latch into open/close position. Use metal washers to adjust the door if needed.

**WWW.SYSRACKS.COM**

**Technical support:**

**info@sysracks.com**  
**(514)660-6333**

youtube video "SYSRACKS Premium Manual"

<https://www.youtube.com/watch?v=o8hulFUNjQI&t=3s>

