




Join the frames with the Top/Bottom Covers into a single construction Plastic bag #1.

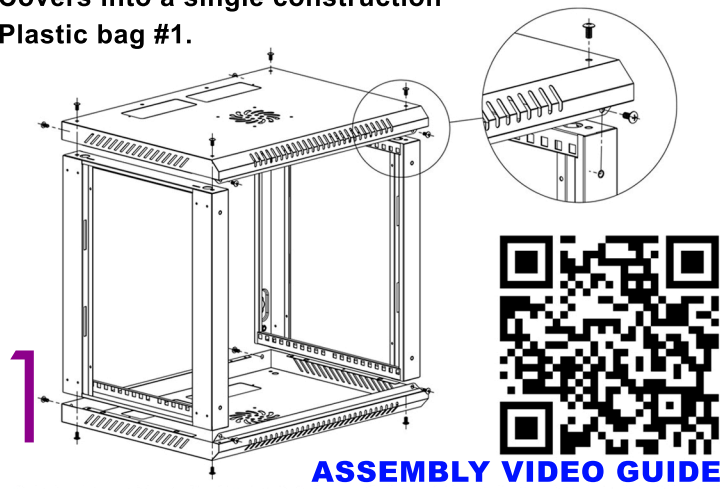


Install the side panel locking mechanism.

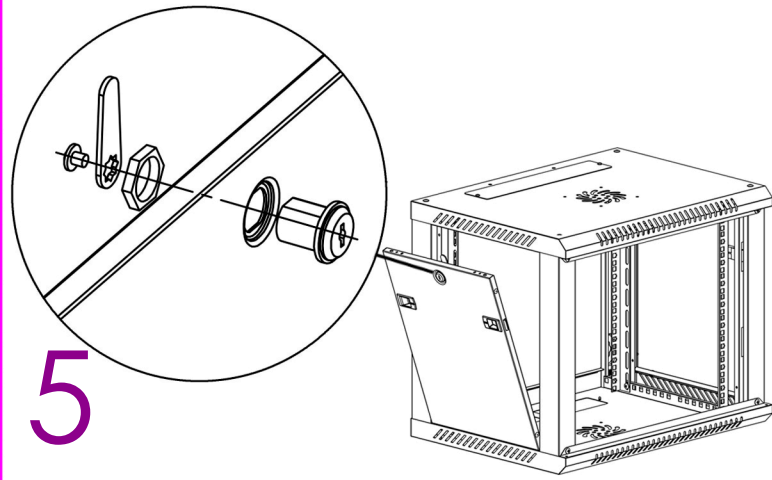


Install the rear panel using 4 X M4 self-tapping screws. Plastic bag #5.

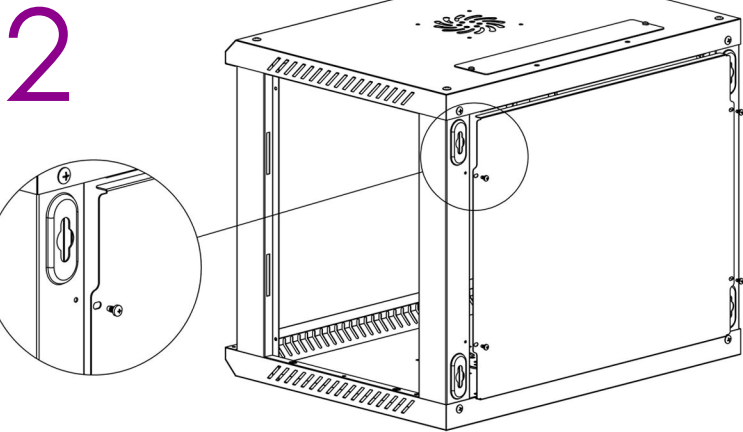


Using M6 bolts and nuts, install the casters.

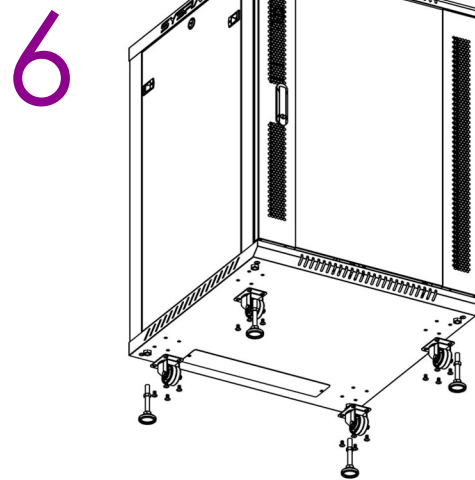

Install the brush type cable entries using M6 bolts/nuts. 2 bolts/nuts for each cable entry. Plastic bag #2.

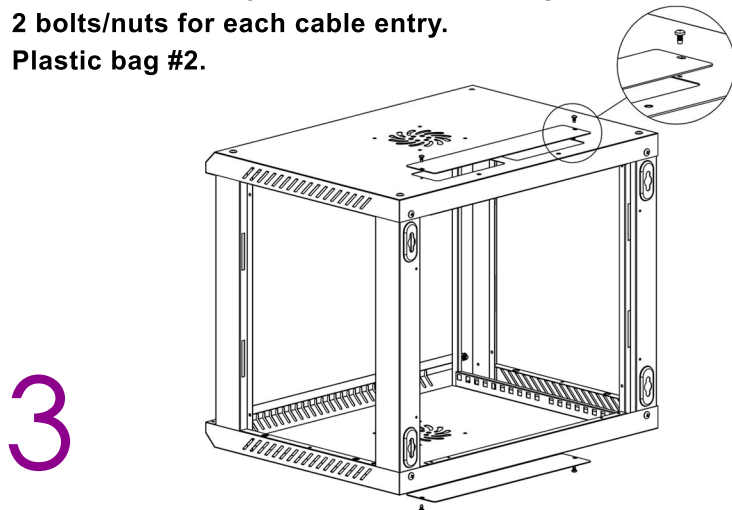


Install the front door locking mechanism.

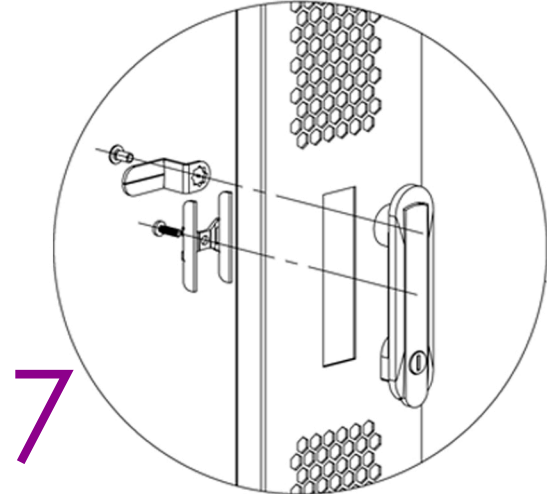

Using the plastic bag #2, or hardware set install the vertical mounting rails. The distance between the rails is to be determined based on the depth of the equipment or, the supplied shelves.

Use the M6 bolts/nuts, or hardware set to install the shelves on the desired height.

4 **youtube assembly video guide**  
**"SYSRACKS WALL MOUNT"**

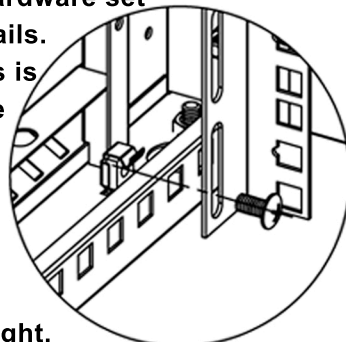

Use the plastic bushings (or, adjustable washers if needed) when mounting the front door.

