











STEP#1






STEP#2


Using Bolts M6 and Cage nuts install the vertical mounting rails.



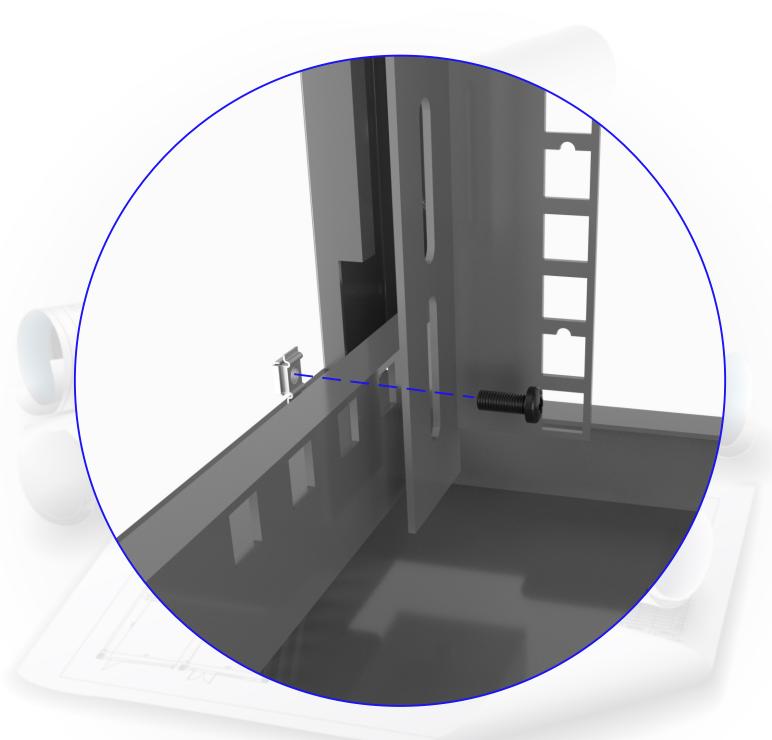


Youtube assembly video guide "SYSRACKS WALL MOUNT"




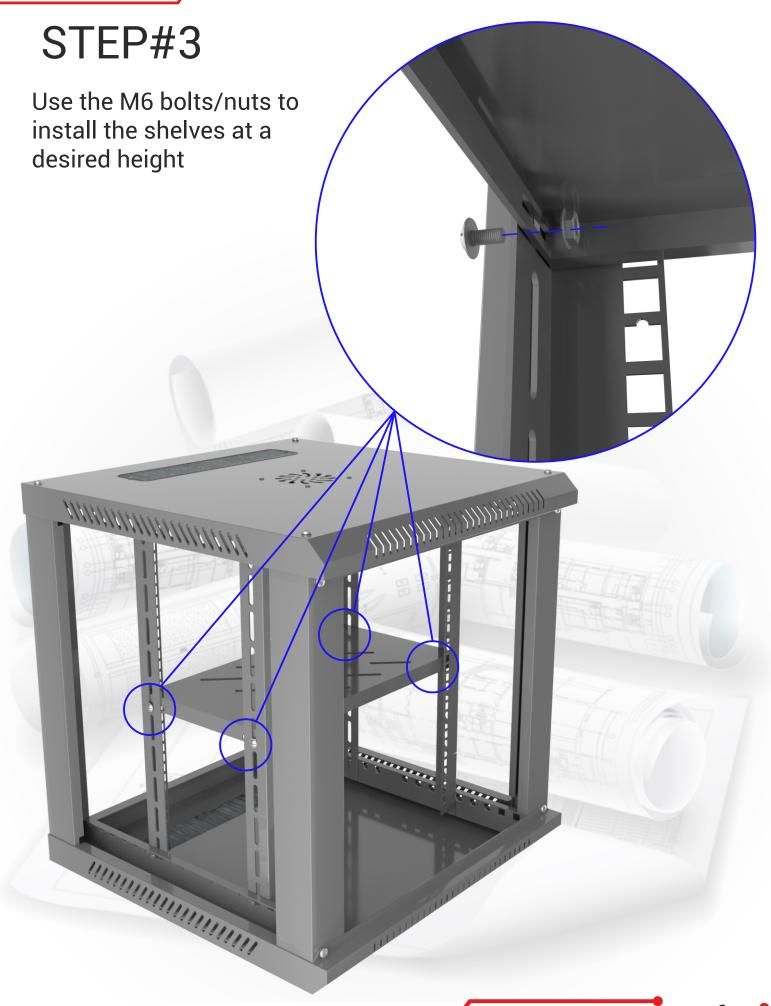




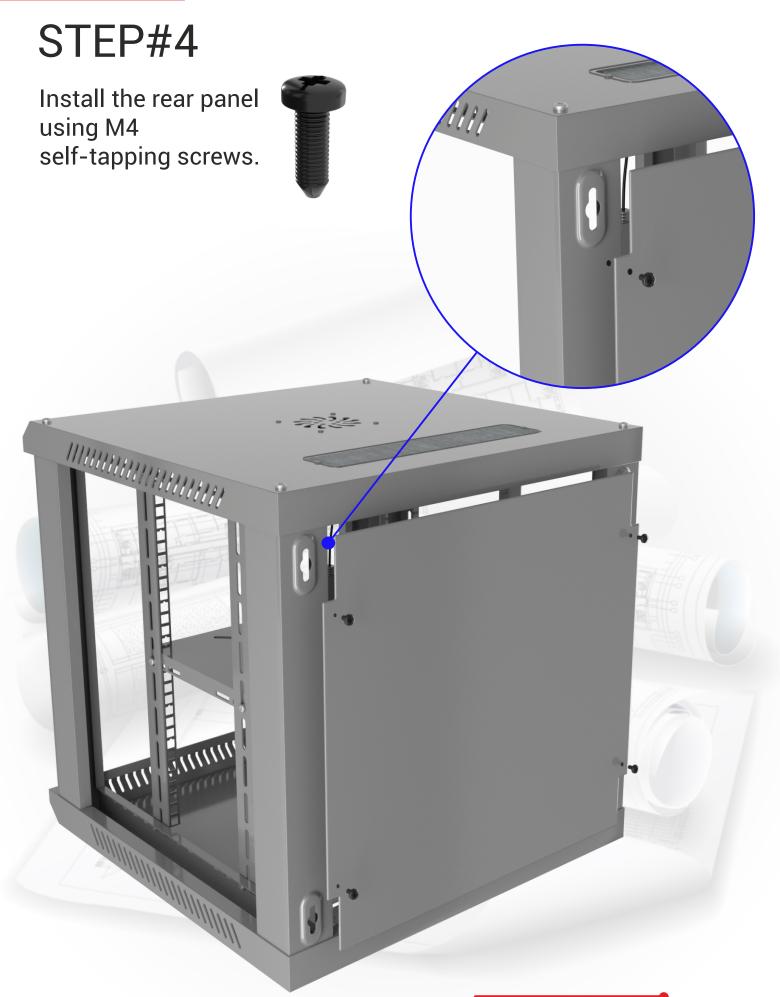



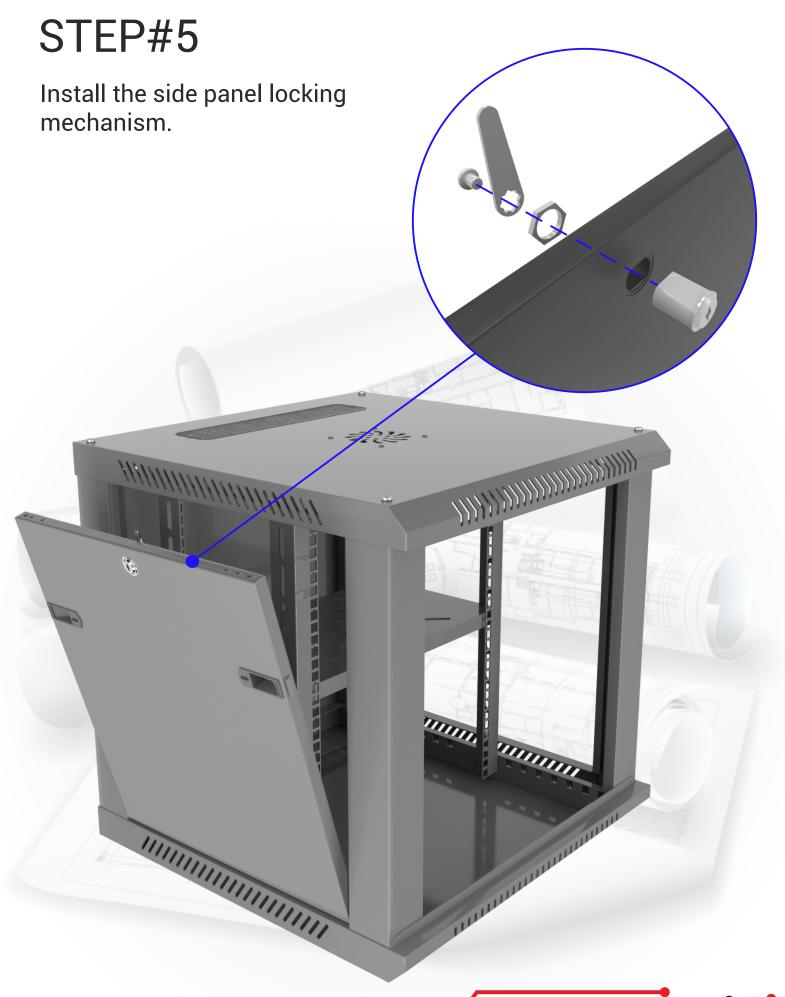


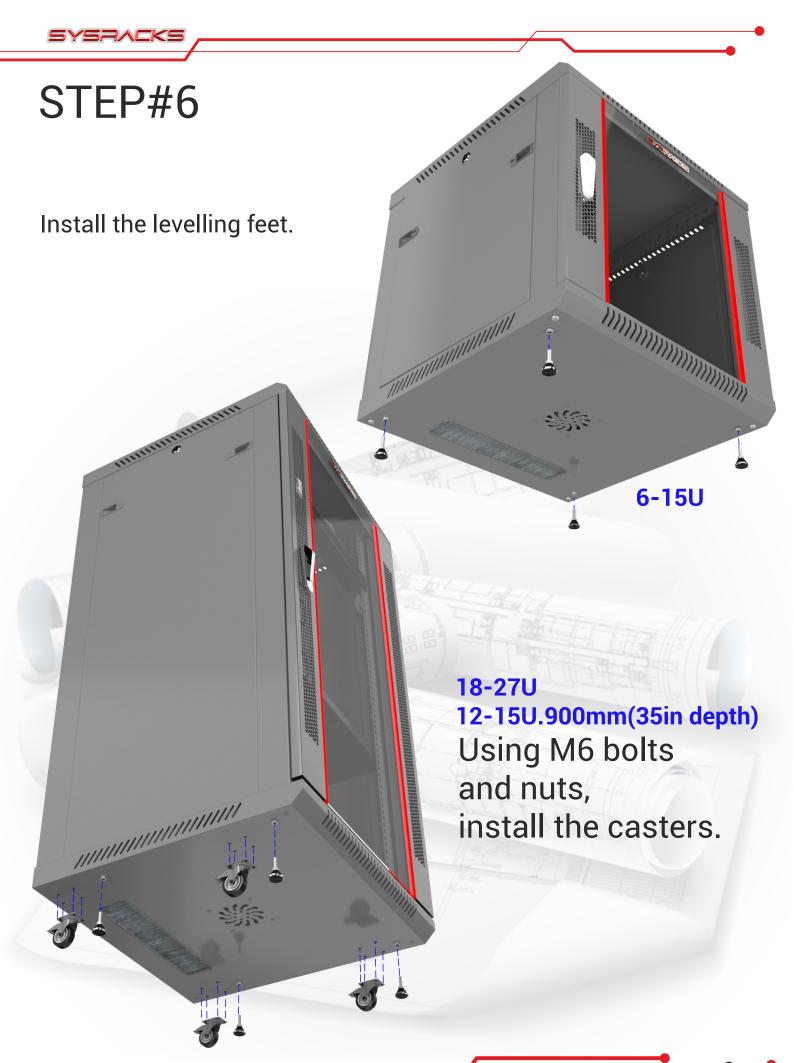




STEP#7

Install the front door locking mechanism.

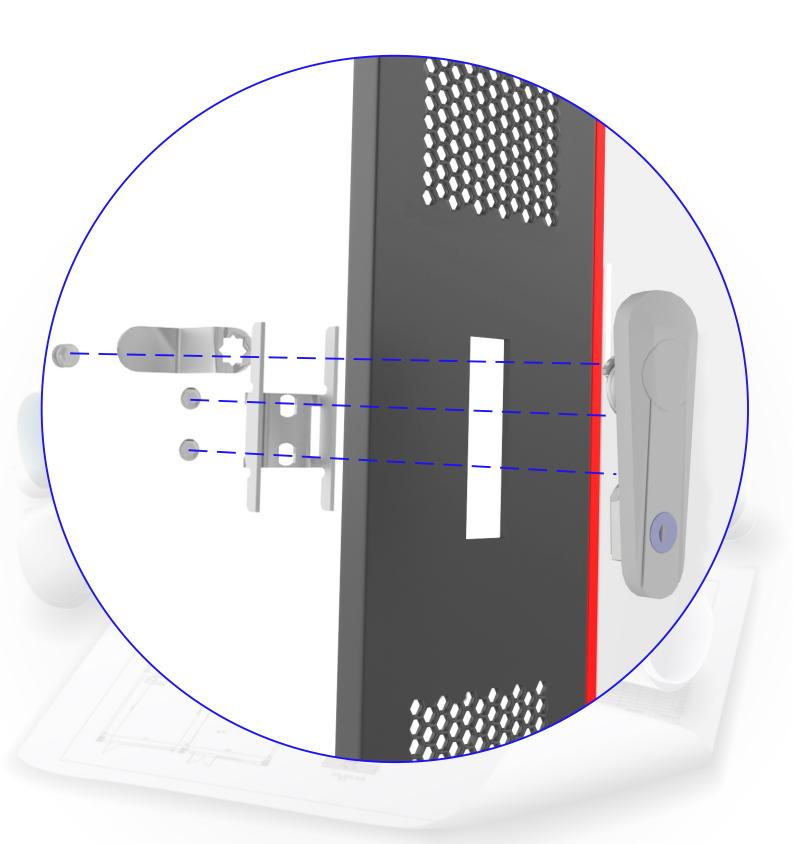



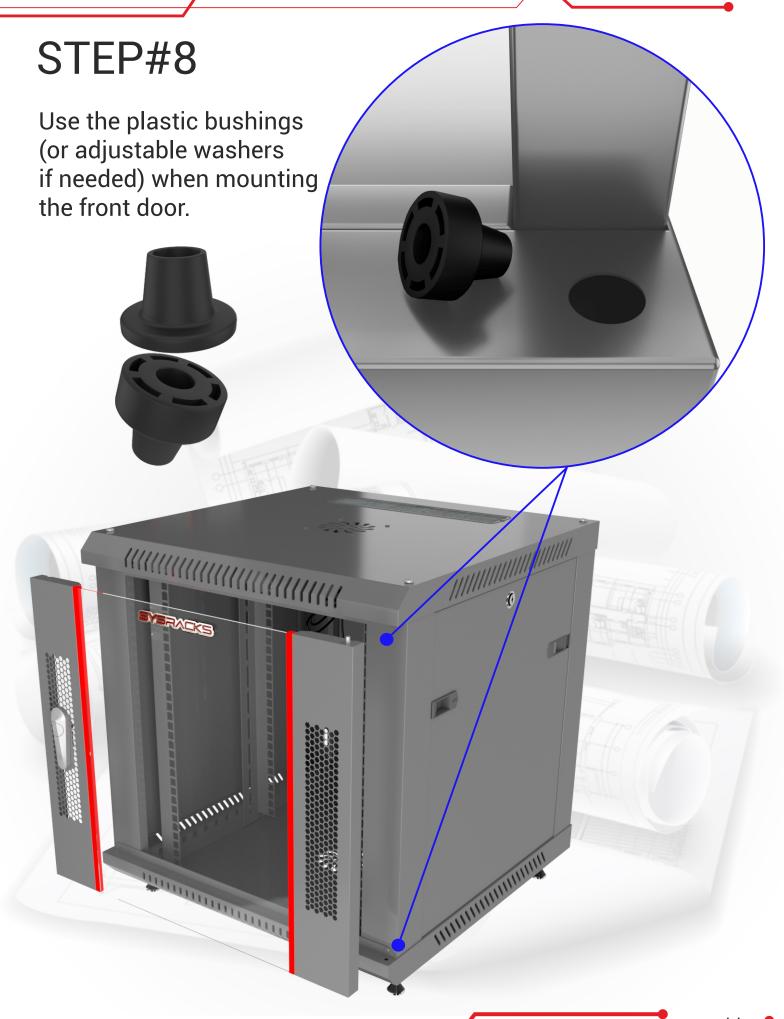

PRODUCT LINE





Distribution of Telecommunication & IT Equipment

www.sysracks.com

514-660-6333



366 McArthur Street, St-Laurent Montreal, QC, Canada H4T 1X8 info@sysracks.com